

# NOVÝ FORD TRANSIT



Go Further


# Nový Ford Transit

---



Go Further

# Rozměry skříně – L3 (dříve dlouhý rozvor LWB)

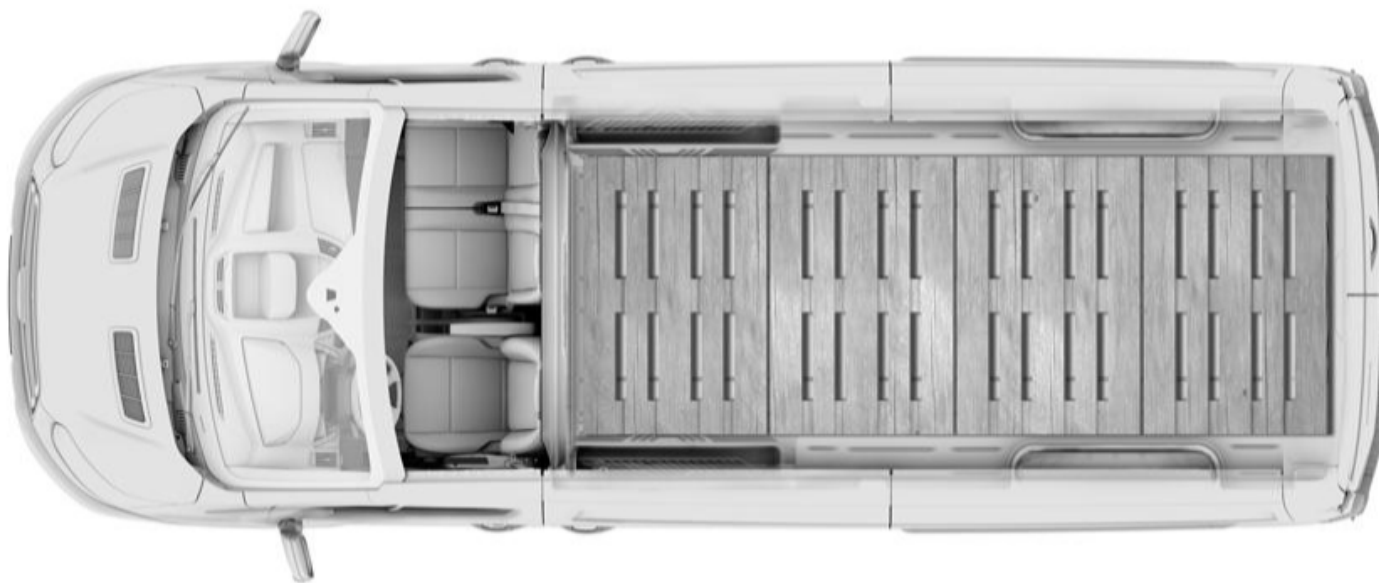

	Current Transit		New Transit		New Transit Change	
	FWD	RWD	FWD	RWD	FWD	RWD
Load Length	3,399	3,399	3,494	3,494	95	95
Load Width	1,762	1,762	1,784	1,784	22	22
Load Height H2	1,745	1,645	1,886	1,786	141	141
Load Height H3	1,985	1,885	2,125	2,025	140	140
Load Cube H2	10.45	9.85	11.5	11	1.05	1.15
Load Cube H3	11.89	11.29	13	12.4	1.11	1.11
Europallet Capacity	4	4	4	4	0	0

**Vnitřní výška skříně 212,5cm**



Go Further